

# AREBOS

## Electric Heater

AR-HE-KV01



Please follow all security measures in this user's manual to ensure a secure use.



Thank you for trusting in AREBOS.

# List of contents

<b>1. Safety instructions .....</b>	<b>3</b>
<b>2. Mounting .....</b>	<b>5</b>
<b>3. Commissioning.....</b>	<b>6</b>
<b>4. Technical specifications.....</b>	<b>6</b>
<b>5. Cleaning and storage.....</b>	<b>6</b>
<b>6. Disposal instruction .....</b>	<b>7</b>
6.1 Disposal of the packaging.....	7
6.2 Disposal of waste equipment .....	7
6.3 Meaning of the "dustbin" .....	7

Please read and save these instructions. Read through this user's manual carefully before using product. Protect yourself and others by observing all safety information, warnings and cautions. Failure to comply with instructions could result in personal injury and/ or damage to product or property. Please retain instructions for future reference.

## 1. Safety instructions

### Explanation of the symbols



This product must not be disposed of with household waste!



By means of a CE marking, it can be recognized that a product complies with the legal requirements of European legal standards and therefore may be traded within the European Community.

- **IMPORTANT:** Please read the operating instructions completely before using the heater and keep them for later use.
- Improper use of this device can cause serious and extensive health and property damage. Please read the following instructions carefully. Familiarize yourself with the device before using it. This is the only way to ensure safe and perfect operation of the heat convector.
- **Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**
- **Warning! Never leave the electric heater unattended!**
- **Warning! The device is not equipped with a room temperature control device. Under no circumstances should you use the heater in rooms where there are people who are unable to leave the room on their own, with the exception of permanent supervision.**
- The heater is not intended for use in the bathroom, laundry, or similar premises. Do not install the heater in the immediate vicinity of a bathtub, shower or swimming pool.
- This device must not be used by persons (including children) who have limited physical, sensory or mental abilities or a lack of experience and knowledge, unless instructed and supervised by a responsible person in the safe use of the device.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way

and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not use the device outdoors.
- This appliance is approved for domestic use only.
- Make sure that the electric heater is always on firm, level ground.
- When setting up the device, ensure a safe and stable position. Only use the device in an upright position. If the unit has fallen down, unplug the power cord, put the unit upright again and let it cool down before putting it back into operation.
- Do not place the heater on very deep pile carpets.
- Only use the heater after the feet have been installed correctly.
- Before connecting the electric heater to the power supply, check that the voltage indicated on the rating plate corresponds to the voltage of the mains supply and that the socket is earthed.
- The heater must not be covered to avoid excessive heating/overheating of the heater.
- Make sure that the cable does not come into contact with the hot surface of the heater.
- Never use the device with a damaged cable; if the power cable is damaged, it must be replaced by a recognized service center or a similarly qualified person. If the plug is damaged, refer to the detailed description below to replace the plug.
- Do not use the cord to carry the power tool, hang it up or pull the plug out of the socket. Keep the cable away from heat, oil, sharp edges or moving parts of the unit. Damaged or entangled cables increase the risk of an electric shock.
- Do not cover or block any of the heat outlet grilles or the air intake openings of the heater.
- Placing the heater in the immediate vicinity of curtains or furniture may cause a fire.
- Do not place the heater in front of or directly under a power outlet.
- Do not put any objects in the heat outlet or the air intake grilles of the heater.
- Never use the device near flammable liquids or flammable dust.
- Keep power tools away from rain or moisture.
- Never touch the power plug with wet hands.
- The penetration of water into a power tool increases the risk of an electric shock.
- Always unplug the power cord when changing the location of the heater.
- Do not touch the hot parts of the convactor with bare fingers during operation. Always use heat-insulated gloves or pot holders to touch the convactor and its parts. Make other users aware of the dangers!
- Check regularly. Use of this device may cause wear on certain parts. Therefore, check the device regularly for any damage and defects.

## 2. Mounting

- Before using the heater, the feet must be attached to the unit (enclosed with the package separately). These are attached to the underside of the device using the 4 tapping screws provided. Please make sure that they are correctly attached to the bottom end of the side paneling.



### Wall mounting

1. The electric heater is equipped with 4 angle brackets, screws and plastic plugs, so that the heater can also be mounted on a wall if required.
2. If you have decided to attach the device to the wall, do not screw on the feet. The spatial location must be chosen carefully. The heater must not be located in front of or below a socket or shelf, and not in the immediate vicinity of a curtain or other obstructions. In addition, observe the above safety instructions.
3. Once you have selected the location of your heater, you will need to drill two holes 0.315 in (8 mm) in diameter and 1.69 in (43 mm) deep with a horizontal distance of 19.13 in (486 mm) and a minimum distance of 15.75 in (400 mm) from the ground. Any flooring or carpet must be considered. If baseboards are present, the mounting holes must be at least 15.75 in (400 mm) above the top edge of the skirting board. Using the plastic dowels and fixing screws, two of the mounting brackets are attached to the wall. The other pair of mounting brackets are attached to the bottom of the heater. These are fastened by means of the fixing screws of the feet so that the clamps protrude beyond the back of the heater and thereby keep the bottom of the heater away from the wall.
4. If required, these clips can be fixed to the wall using the remaining dowels and screws. If you choose this option, we recommend that you hang the heater at the top mounting points and then mark the hole positions of the bottom brackets on the wall before drilling the mounting holes.

### 3. Commissioning

- **Note:** Should the heater give off a slight odor or smoke when used for the first time or after prolonged storage, this will be normal and will disappear after a longer period of use of the heater.
1. Look for a suitable location for your electric heater, taking into account the above safety instructions.
  2. Insert the mains plug into a suitable socket.
  3. Fully turn the thermostat switch clockwise to the maximum setting.
  4. Turn on the heating elements using the toggle switches on the side panel. When the heaters are on, the switches light up. For the highest possible heat output, please switch both switches on.
  5. When the desired room temperature has been reached, the thermostat switch should be turned slowly counterclockwise until a click sound is heard and the lights on the switches are off. After that, the heater keeps the set room temperature by automatically turning it on and off.
  6. In the minimum position (completely counterclockwise), the heater provides an antifreeze program. In this position, depending on the size of the room, the heater gets the temperature above the freezing point.

### 4. Technical specifications

<b>Modell</b>	<b>AR-HE-KV01</b>
Power supply	2000 W
<b>Heating steps</b>	
Step 1	750 W
Step 2	1250 W
Step 3	2000 W
Power input	230 V; 50 Hz
Dimensions	20.47 x 4.33 x 13.39 in (520 x 110 x 340 mm)
Cable length	1,6 m
Thickness	4.13 in (10.5 cm)
Protection class	I
Weight	5.29 lbs (2.4 kg)
Colour	White/Black

### 5. Cleaning and storage

- Disconnect the device from the power supply before each cleaning and allow it to cool completely.
- Clean the outside of the heater with a damp cloth and then polish it with a dry cloth. Do not use cleaning or abrasives. Make sure that no water penetrates into the heater.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the heater is not going to be used for a long time, it should be protected from dust and stored in a clean, dry place.

## 6. Disposal instruction


### 6.1 Disposal of the packaging

- Please make reference to the guidelines and standards for appropriate disposal of the packaging valid in your region. In part, the package may consist of plastic bags - watch this respect, with special care to ensure that this is not out of the reach of children. There is a risk of suffocation!

### 6.2 Disposal of waste equipment

- Equipment must be disposed of in accordance with the rules and regulations of the local waste disposal.

### 6.3 Meaning of the "dustbin"

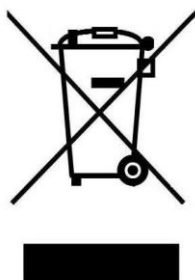

Protect our environment; electrical appliances do not belong in household waste. Use the provided for the disposal of electrical equipment collection points and enter your electrical and electronic equipment that you no longer use. They help ensure that the potential effects of incorrect disposal on the environment and human health to be avoided. So, do your part to recycle, recycling and other forms of recovery of waste electrical and electronic equipment. Information on where the devices are disposed of, please contact your local authorities or local Governments.

**Our customer service number: +49 (0) 931-45232700**

## EU Declaration of Conformity

We,

Canbolat Vertriebs GmbH, Gneisenaustraße 10-11, 97074 Würzburg, Germany,

Hereby declare that the product named below, seen its design and construction as well as according to our sales, has been complied with the relevant and basic health and safety EU-requirements.

Name of the product: Electric heater

Model Nr.: AR-HE-KV01

Art. Nr.: 4260551587641

If the product has any modification not allowed by us, this declaration loses its validity.

Tested according to EU standard:

EN 62233:2008

EN 60335-2-30:2009+A11:12

EN 60335-1:2012+AC:14+A11:14+A13:17

Date/Manufacturer Signature/Location:

Würzburg, 29 June 2020



Identification of the signatory:

Korhan Canbolat, head of the company

Authorised representative for the technical documentation:

Korhan Canbolat

**Office address:**

Canbolat Vertriebs GmbH

Gneisenaustraße 10-11

D-97074 Würzburg

Return address can be found in the imprint: <https://www.arebos.de/impressum/>

VAT identification number: DE 263752326

Court of the Commercial Register is Würzburg, HRB 10082

WEEE Reg.-No. DE 61617071