# **AREBOS**

## Mulled wine cooker stainless steel

AR-HE-GKE68L/R/S ● AR-HE-GKE88L/R/S ● AR-HE-GKE20L/R/S



Please follow all security measures in this user's manual to ensure a secure use.





# **Table of contents**

1. Safety instructions	3
1.1 Explanation of the symbols	3
1.2 General safety instructions	3
2. Commissioning	
2.1 Before the first use	
2.2 Power supply	
3. Operation	
4. Overheating protection	
5. Cleaning and maintenance	6
6. Specifications	
7. Environmentally friendly disposal	
7.1 Disposal and packaging	
7.2 Disposal of old equipment	
EU Declaration of Conformity	

Thank you for purchasing our product. Please read the operating instructions carefully before using the product for the first time. If you give the product to a third party, this instruction manual must also be handed over. Keep this manual for future reference. The drawings in this manual may not correspond to the physical objects. Please refer to the physical objects.

## 1. Safety instructions

#### 1.1 Explanation of the symbols



On the basis of a CE marking, it can be recognized that a product complies with the legal provisions of the European legal standards and can therefore be traded within the European Community.



**Warning!** Read the safety instructions carefully. The Failure to follow the safety precautions can result in serious injury or damage. Keep the operating instructions in a safe place.



This product must **not** be disposed of with household waste!



Warning! Hot suface



This product has been tested and certified by SGS.
The symbol "GS" stands for tested safety. Products marked with this symbol comply with the requirements of the German Product Safety Act (ProdSG).

#### 1.2 General safety instructions

- Warning! Please make sure that there is enough liquid in the container BEFORE switching on the device. Otherwise, dry heating could cause severe permanent damage to the unit!
- The device is not intended to be used by persons (including children) with limited physical, sensory or mental abilities or lack of experience and knowledge, unless they are supervised by a person responsible for their safety or have received instructions from them on how to use the device.
- Children do not recognize the dangers that can arise when handling electrical appliances.
   Therefore, keep electrical appliances away from children or supervise their use. In any case, appropriate prior instruction is required.

- Before commissioning, check the complete device including any accessories for defects that could impair the functional safety of the device.
- Check the power cable and plug regularly. If you notice any damage, do not use the unit. Take it to a qualified specialist workshop.
- Please note that the appliance may only be connected to a properly installed household socket that corresponds to the specifications on the appliance's nameplate.
- If you clean the unit or do not use it, unplug it.
- Do not pull the mains plug out of the socket by pulling the connection cable; to do so, touch the mains plug.
- If the device is not used properly or for any purpose other than that for which it was designed, we decline any liability for any damage that may result.
- Do not use the device for any purpose other than its intended purpose.
- The device is intended for domestic and non-commercial use only.
- Repairs must be carried out by a professional, as safety instructions must be followed to avoid hazards.
- Place the device on a fixed and flat surface. Never put it on a hot surface such as a hob, etc.
- Check that the pad is heat-resistant (not on wood, tablecloth etc.)
- The unit should never be placed or used on hot surfaces (hot plate) or near open gas flames.
- Do not allow the mains cable to hang (risk of tripping!) and make sure that it does not touch any hot surfaces.
- Do not use the device near flammable liquids or pressurized aerosol cans.
- Do not leave the unit unattended while it is in operation.
- Do not use accessories that are not part of the unit (cover).
- Never immerse the device, power cord, or plug in water or any other liquid.
- Do not heat or turn on the unit without contents.
- Do not fill the unit completely.
- Wear the unit only if it is cooled.
- The surface of the housing is hot during operation, do not touch it. For this reason, please note that the unit should be placed out of reach of children or babies. Risk of burns!
- Make sure that steam escapes into the area of the cover (risk of scalding!).
- Do not remove the cover during boiling.
- If the device is too full, the boiling liquid may splash.

### 2. Commissioning

#### 2.1 Before the first use

- Attention! Sometimes the overheat protection has been triggered during transport and the unit no longer switches on. In this case, follow the instructions in the chapter "Overheating protection".
- Before first use, clean the appliance and cover with warm water and a little detergent. Dry it completely before turning on the unit.
- Place the unit on a fixed, flat and heat-resistant surface.

#### 2.2 Power supply

Connect the unit only to a properly installed power outlet with a ground contact. The mains
voltage must correspond to the voltage indicated on the nameplate of the device. The device
complies with the mandatory directives for CE marking.

## 3. Operation

- Fill the container with water/cold drinks.
- Inside the container is a maximum level marking do not exceed this marking (possibly a little less).
- The ambient temperature should be between ca. 10 °C and 38 °C, and the humidity should be less than 90 %.
- Put the cover on the unit and lock it by turning the cover.
- Turn on the unit by turning the ON/OFF switch to "ON". Now the heating indication is yellow.
- Set the controller to the desired temperature. The appliance starts with heating the water/drink.
- Cooking the water (97 °C) takes about 45 minutes (depending on the amount of water).
- The main heating element turns off (the indicator turns off) when the drink has reached the desired temperature that has been set.
  - The heat-retaining heating element turns on and keeps the water/drink hot. The indication of heat retention is yellow (Keep warm).
- Drain the water through the tap.
- If only 3 cups (i.e. 600 ml) remain in the container, turn off and unplug the appliance.

#### Thermostat/Warm-keeping function

The unit has a thermostat.

The heating will be interrupted as soon as the drink has reached the desired temperature. The red indication goes out. The drink is kept warm, the indication turns yellow. If the temperature drops below the thermostat's set temperature, the thermostat automatically turns on again and heats up to the set temperature (red light on).

## 4. Overheating protection

- If the device overheats, for example, because it has been heated with little or no content, the overheating protection becomes active and switches the device off automatically. If this is the case, the thermostat can no longer be adjusted.
  - Press OFF and disconnect the plug. Allow the unit to cool down.
  - Press the metal pin on the **underside** of the device (Reset).
  - Now you can connect the device and it is ready to use.
  - If the unit still does not work (by turning the unit on the indicator does not illuminate red), turn it off and allow it to cool longer before pressing the metal shaft again.

#### Please respect:

- The AREBOS Mulled wine cooker is only designed to heat and keep water and beverages hot.
   If you heat viscous dishes, for example, the uneven heat dissipation can cause the overheating protection to trip.
- The overheat protection can also be triggered during transport.

## 5. Cleaning and maintenance

- Unplug the plug and allow the unit to cool before each cleaning!
- Never immerse the device and cable in water.
- To clean the device and the cover, use a soft, damp cloth. If necessary, you can add a soft dishwashing product.
- Remove limescale residues from time to time with commercially available descaling agents (observe the manufacturer's instructions!). Then boil in clear water.

#### Note:

- In order to maintain the performance of the hot beverage dispenser, if you use it frequently, check the seal and screw of the outlet valve regularly to prevent it from leaking.
- If the screw is loose, tighten it.
- If the seal is damaged or leaking, replace it.

## 6. Specifications

Model	AR-HE-GKE68L	AR-HE-GKE88L	AR-HE-GKE20L
	AR-HE-GKE68R	AR-HE-GKE88R	AR-HE-GKE20R
	AR-HE-GKE68S	AR-HE-GKE88S	AR-HE-GKE20S
Manufacturer's number	4260551589911	4260551589928	4260551589935
	4260627428953	4260627428960	4260627428977
	4260627429097	4260627429103	4260627429189
Capacity	6,8 L	8,8 L	20 L
Power	950 W	950 W	1650 W
Temperature settings	30-110 °C	30 – 110 °C	30 – 110 °C
Material	Stainless steel	Stainless steel	Stainless steel
Degree of protection	IP20	IP20	IP20
Voltage	220-240 V	220-240 V	220-240 V
Weight	2,3 kg	2,6 kg	7 kg
Dimensions	27,2 x 27,2 x 43,8 cm	27,2 x 27,2 x 45 cm	32,5 x 32,5 x 55,5 cm

## 7. Environmentally friendly disposal

**Warning Danger of suffocation!** Packaging material is dangerous for children. Never let children play with packaging material.

#### 7.1 Disposal and packaging

• The packaging of your unit consists of materials that are necessary to guarantee effective protection during transport. These materials are fully recyclable and therefore reduce the environmental impact. Dispose of the packaging in a bin for recyclable materials.

#### 7.2 Disposal of old equipment

 Old appliances must be disposed of in accordance with the guidelines and regulations of the local waste disposal authority. Check with your local administration for the address of the nearest recycling centre and deliver your appliance there.



The symbol of the crossed-out dustbin on a Waste electrical or electronic equipment indicates that it must not be disposed of with household waste at the end of its life. Collection points for waste electrical and electronic equipment are available free of charge in your area. You can obtain the addresses from your city or local government. You can find out about other return options created by us on our website <a href="https://www.arebos.de">www.arebos.de</a>.



The separate collection of Waste electrical or electronic equipment is intended to enable the reuse, recycling or other forms of recovery of Waste electrical or electronic equipment and to avoid the negative consequences of disposal on

the environment and human health.

Our customer service number: Tel. +44 (0) 208 068 5604 Fax: +49 (0) 931 4523 2799 / E-Mail: <u>info@arebos.de</u>

Office adress: Canbolat Vertriebs GmbH • Gneisenaustraße 10-11 • 97074 Würzburg

You can find the return address in the imprint: https://www.arebos.de/impressum/

## **EU Declaration of Conformity**

We, the

Canbolat Vertriebs GmbH, Gneisenaustraße 10-11, 97074 Würzburg, Germany

hereby declare that the equipment described below, by virtue of its design and construction and in the versions placed on the market by us, complies with the relevant essential health and safety requirements of the EU directives.

Product name: AREBOS Mulled wine cooker stainless steel

Model number: AR-HE-GKE68L / AR-HE-GKE68R / AR-HE-GKE68S ● AR-HE-GKE88L / AR-HE-GKE88R /

AR-HE-GKE88S ● AR-HE-GKE20L / AR-HE-GKE20R / AR-HE-GKE20S

Article number: 4260551589911 / 4260627428953 / 4260627429097 • 4260551589928 / 4260627428960 / 4260627429103 • 4260551589935 / 4260627428977 / 4260627429189

Should the appliance be modified without our consent, this declaration of conformity will lose its validity.

Directives

This device complies with the following EU/EC directives: 2014/35/ EU Low Voltage Directive 2014/30/ EU EMC Directive 2011/65/ & 2015/863/ EU RoHS Directive

Date/Signature Manufacturer/Place:

Würzburg, February 8, 2022

Signature:

Dipl.-Inform. (Univ.) Korhan Canbolat, Managing Director

Representative of these instructions for use/technical data: Dipl.-Inform. (Univ.) Korhan Canbolat, Managing Director

Office address:

Canbolat Vertriebs GmbH Gneisenaustraße 10-11 D-97074 Würzburg

Return address can be found in the imprint: https://www.arebos.de/impressum/

VAT identification number: DE 263752326

Court of the Commercial Register is Würzburg, HRB 10082

WEEE Reg.-No. DE 61617071